

AP22 CPR2102M Cable

PC Pin (9 pin female)	AP22 Pin (9 pin male)	
5	3	PC ground
3	9	PC TX AP22 RX
2	2	PC RX AP22 TX

On some PC's you may need to jump on the PC side pins 4 6 8 together to jump out hardware handshaking.

AP22 Port Pinout

PIN	
1	
2	RS232 transmit
3	GND
4	
5	+5 VDC
6	
7	+12 VDC
8	
9	RS232 receive