



RTC Manufacturing, Inc.

P. O. Box 150189
Arlington, TX 76015

(800) 782-8721
(817) 274-3610 fax

Model TR-3 / TR-4
GPS Time Reference

Application Note Number 2

Setup Instructions for the TR-3 / TR-4 GPS Time Reference
for

EAGLE (EPAC300 M40)

Refer to the "D" input mode function of the controller manual.

If the input mode is set to 0 with the system address set to 000, pin 20 on the "D" connector becomes the "Set Clock" function.

Connect the TR-3 / TR-4 relay common wire to logic ground and the normally open wire to pin 20 of the "D" connector which is the Set Clock function.

Set the switches on the TR-3 / TR-4 for a time reset at 4:00AM, Everyday (EDY) per the TR-3 / TR-4 programming instructions.

The controller is preprogrammed to set its clock to 4:00AM when logic ground is applied to pin 20 of the "D" connector.

DISCLAIMER:

The information contained in this application note is accurate to the best of our knowledge. It is the responsibility of the end user to determine the method of resetting the time of day on the exact model and firmware version of the controller being used.